
Dual Jet High Speed Hand Dryer

Usage and Installation Manual

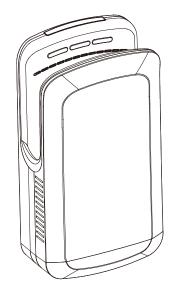




Fenix s.r.o. Jaroslava Ježka 1338/18a, 790 01 Jeseník tel.: +420 584 495 442, fax: +420 584 495 431 e-mail: fenix@fenixgroup.cz , http://www.fenixgroup.cz Fenix Trading s.r.o. Slezská 2, 790 01 Jeseník tel.: +420 584 495 304, fax: +420 584 495 303 e-mail: fenix@fenixgroup.cz , http://www.fenixgroup.cz

Dual Jet High Speed Hand Dryer Using "Injection Airstream", obtain comfort and rapid drying Novelty and beauty, economical of energy and money, environment friendly and durability. Two airstreams of high speed injection dry water drip off your hands within 7 seconds and give you convenience and comfort. Put your This unit is applicable to the homes, restaurants, hands all Pull your hands business buildings, commercial buildings, the way in. out slowly, about supermarkets, hospitals and recreation 7 seconds places, gives you fresh experience and satisfactory use.

Experience extraordinary comfort and convenience from Dual Jet High Speed Hand Dryer



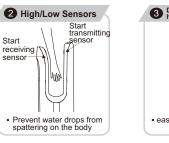




- Do not attempt to install the unit yourself unless you are a trained service technician. Otherwise, this may affect the safety and proper functioning of the unit.
- Read this manual thoroughly and carefully before beginning to use the unit, ensuring safety and proper function. Please keep it well for later reference.

Contents

Safety Precautions1
Using
Part Names and indicator descriptions 3
Usage and features 4
Maintenance 5
Troubleshooting
Wiring Diagram9
Installing
Part Names and Dimensions 10
Safety Precautions before Installing 11
Installing Procedures 12
Test Run

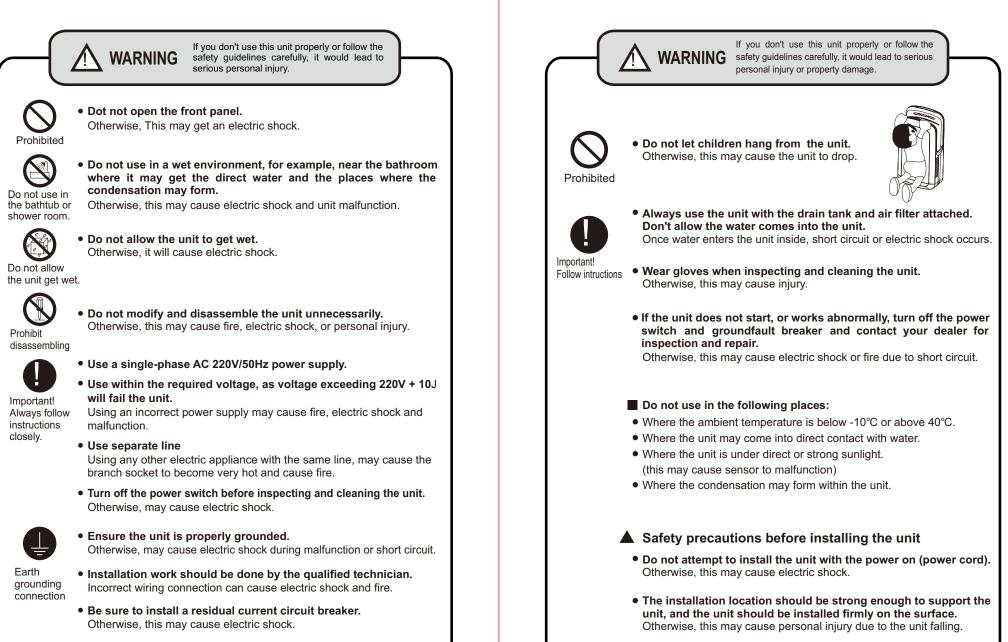

- Use a type whose contact points are at least 3mm apart. % Please use the products of CCC standard.
- ※ Recommended ground-fault circuit breaker (for ground-fault protection). (Use a single-phase 2-line, AC 220V/50Hz cable with a 20A rated current, 15mA-type rated operating current)


1

2


• Wear gloves when installing the unit.

Otherwise, this may cause injury.


Part Names and indicator descriptions

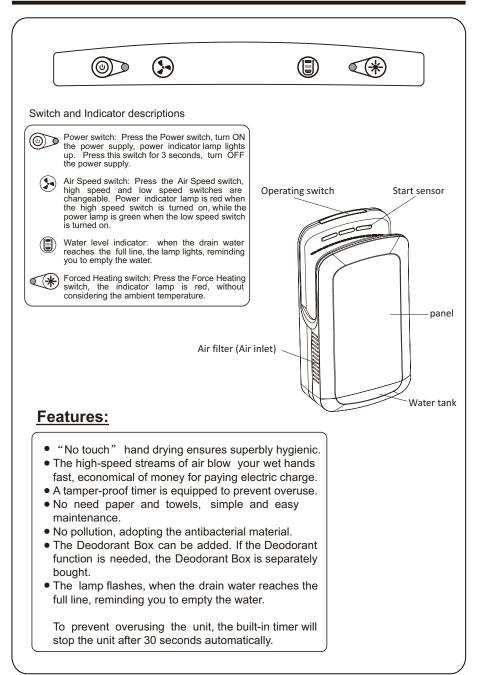


Using methods

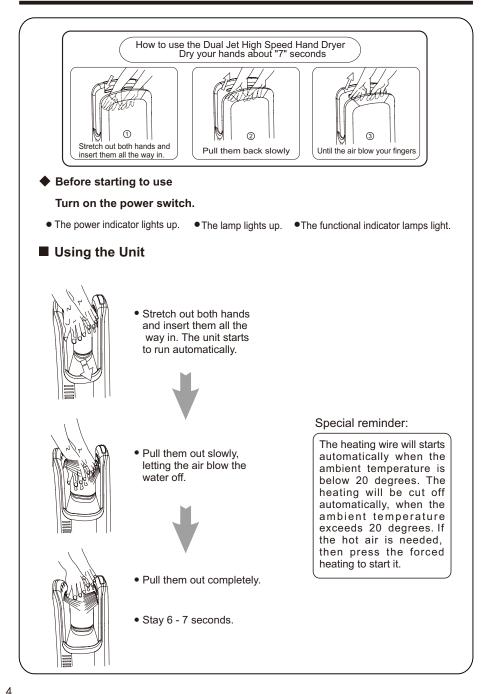

3

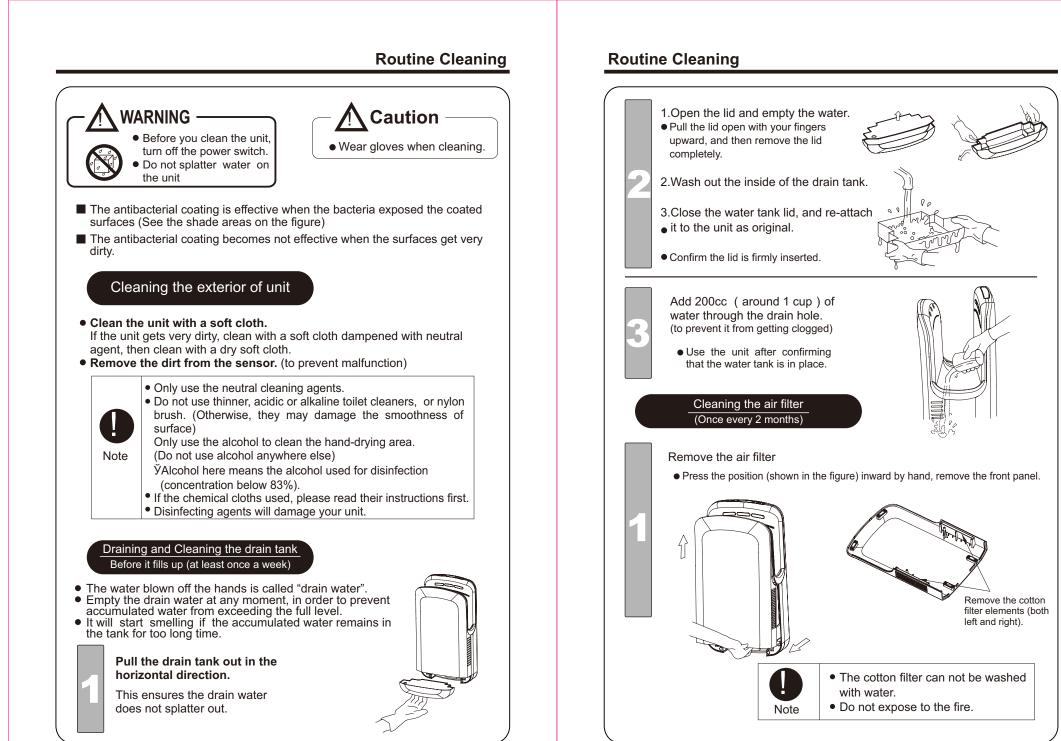

Routine Cleaning

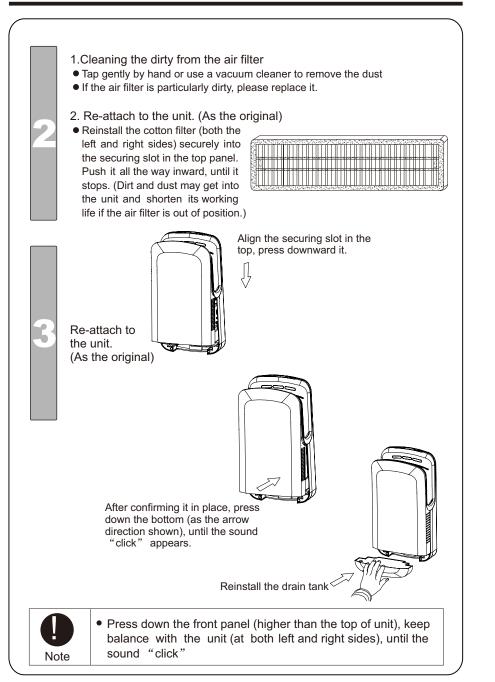


Wiring Diagram

Troubleshooting

If the following problems occur, please perform checks and fix.

Problem	Check	Action		
No air blows even if hands are inserted	Do the display indicators lights up? Is the power switch on? Are you putting your hands all the way in?	 Turn the ground-fault circuit breaker on Turn the power switch on. Put hands all the way in. 		
The unit does not stop blowing	Is the sensor blocked by the dirt or dust?	• Turn the power switch off, and then, after all the lamps in the display have gone off, remove the dust matter. Then turn on the power swtich.		
No hot air comes out	Heater is built-in, is the heater sensor dirty?	• Is the room temperature over 20 ЎJ Turn the power switch off. Remove the front panel, then remove the cover of terminal box, check the fuse (terminal connector) whether burnt or not.		
Indicator light is flashing	If the power supply problems occur,the indicator lights up and is flashing.	• Turn the power switch off. Check all the indicators in the display area have gone off (around 40 seconds), then turn on the power switch again.		
No power		• Turn off power, take down the machine and ask the technician to replace the power cable.		
If the above actions do not work, turn off the power and the ground-fault circuit breaker, and call your dealer to inspect and repair it if necessary. (Costs are as per agreement with the dealer)				

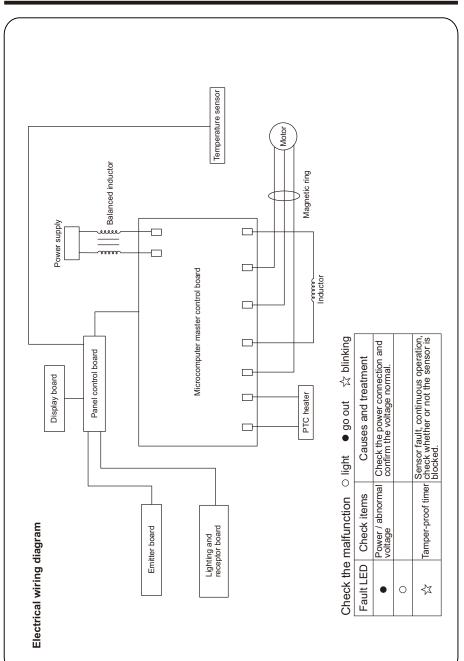


Names of components and dimensions

Precautions before installing

 \triangle

ê

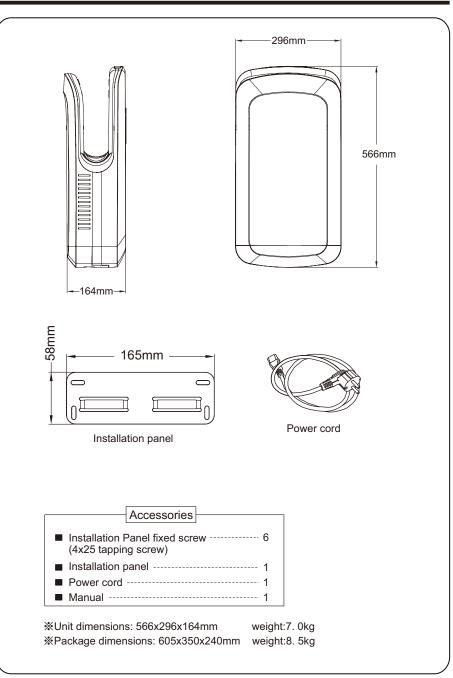

Do not install in the following types of location (otherwise this may cause malfunction):

• Locations where the unit may come into direct contact with water.

1


- Locations where the unit is under direct or strong sunlight
- Locations where there is a lot of condensation.
- Locations where corrosive, neutral, or reductive gases are present


XNote:

The 2 fixed screws should be removed before installation, otherwise, you cannot change the filter, see the right figure.

Installation position guide

- Leave at least 400mm clearance at both sides to make it easier to use.
- Install the unit on the flat wall without unevenness and which can support the weight of the unit.
- There are two methods to connect the power supply.
- (1) Power cord with plug (2) Power c
 - (2) Power cord with no plug (cut-off plug) Directly connected to the socket :

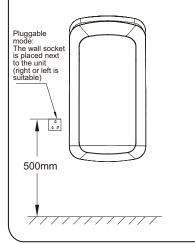

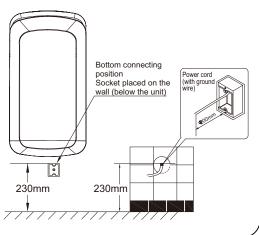

Installation Method


Installation diagram

Installation location

- Fix the installation panel to the wall, as shown in the below figure.
- The installing method for the installation panel:


Choose the power connection mothod, then mark the position according to the size of the paper pattern of the installation panel, drill the external diameter $\Phi 6$ screw holes.

- After drilling the screw holes, insert the rubber plug (attached with the unit) in the screw hose.
- Fix the installation panel with the mounting screws, as shown the below figure.

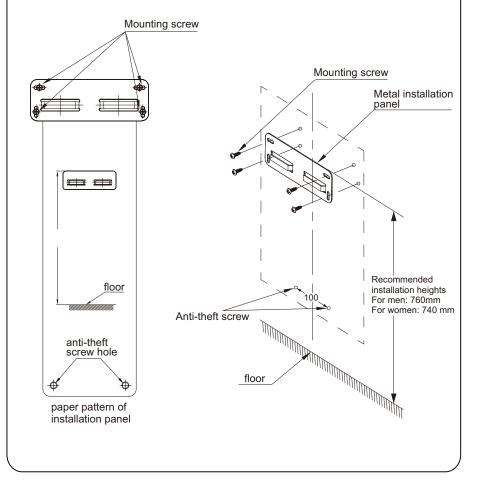

Installation position

- After fixing the installation panel, you can use hang hook in the rear cover of unit to hang the unit on the wall, as shown the left diagram.
- After hanging the unit on the wall, lock the two anti-theft screws at the bottom, as shown in the following figure.

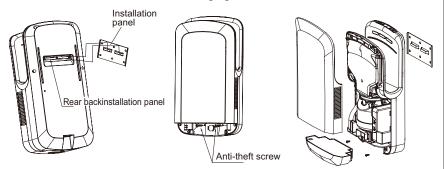


Power connection

- Use a single-phase 220-240V power.
- A single wire (cable core: between 2.0mm² and 2.5mm²) is being used for the power cable.


X The first method of power line connection (pluggable):

- At first, fix the socket near to the unit installation position.
- Then, plug one end of the power cord into the unit, and plug the other end into a socket on the wall.

Note! The power cord must be fixed in the wiring slot in the back of the unit.

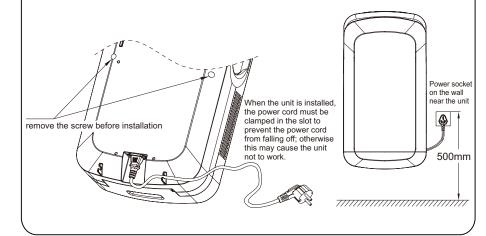

Power connection

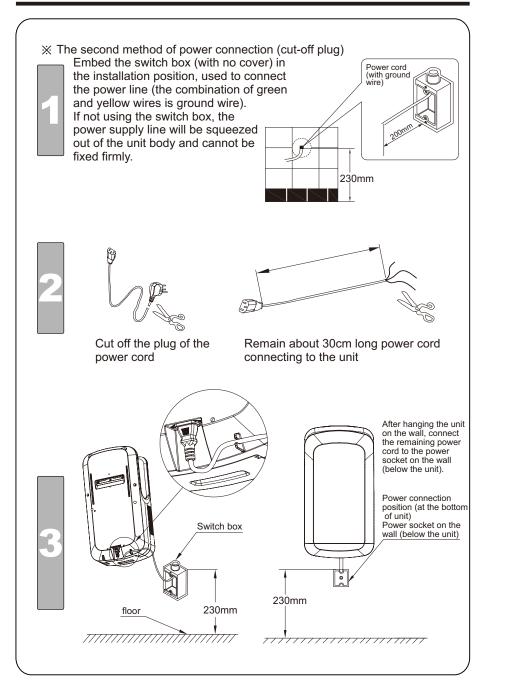

Test Run

	Step	Check	Result
1	Check the voltage of power supply	ls single-phase alternating current 220V - 240V (100-120V) used?	
2	Turn the ground-fault circuit breaker on	Confirm ON	
3	Turn the power switch on	Does the power indicator light up?	
4	Dry hands	Is the air blowing?	
5	Check the unit	Is the unit installed firmly? Any vibration or strange noise?	

* Do not turn the unit power switch on with your hands inside.

* If the self-check indicator in the display lights or is flashing, turn off the power switch off, and turn the power back on when all the indicators go off (after 40 seconds).